





F I G. 5

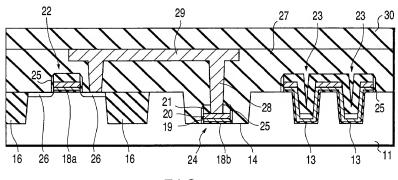



F I G. 6

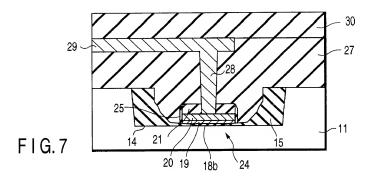


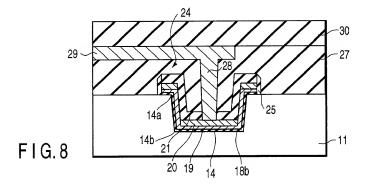


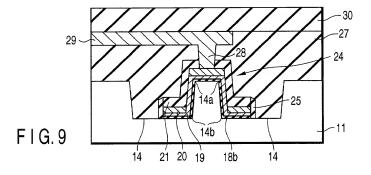

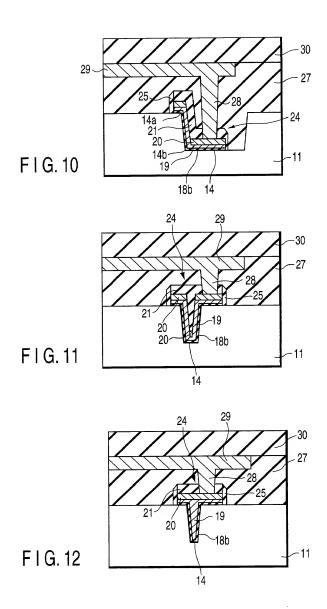


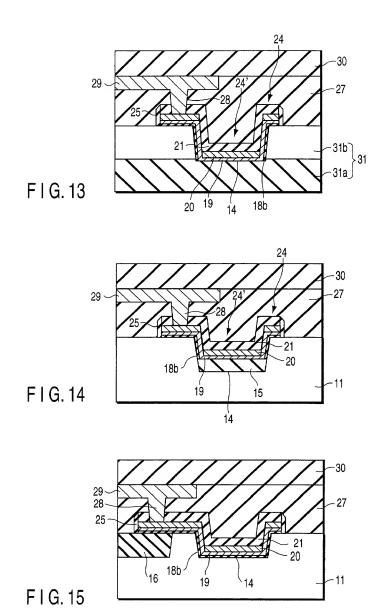


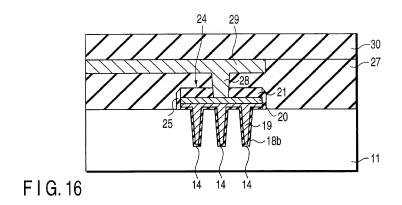


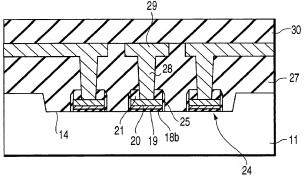



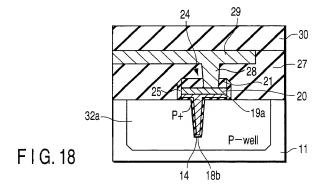


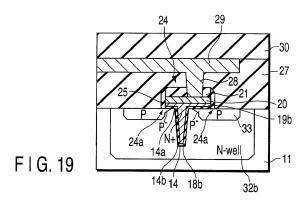

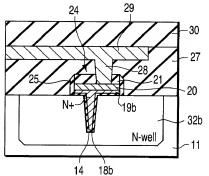


DURING FUSE BREAKDOWN:
POSITIVE VOLTAGE (+) IS APPLIED
TO GATE
DURING ACTUAL USE (JUDGEMENT):
NEGATIVE VOLTAGE (-) IS APPLIED
TO GATE

FIG. 20

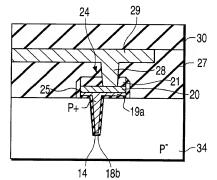



DURING FUSE BREAKDOWN:
NEGATIVE VOLTAGE (-) IS APPLIED
TO GATE
DURING ACTUAL USE (JUDGEMENT):
POSITIVE VOLTAGE (+) IS APPLIED
TO GATE


F I G. 21

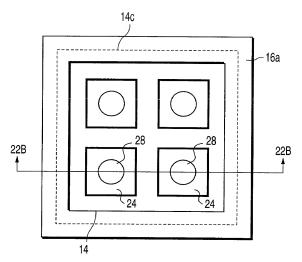


F I G. 22A

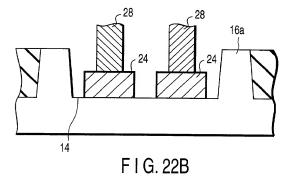

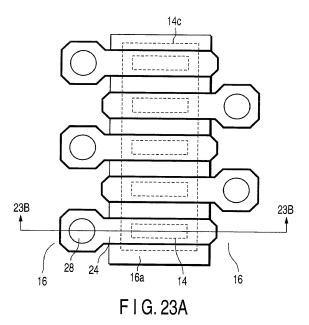


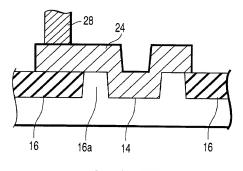


F I G. 23B

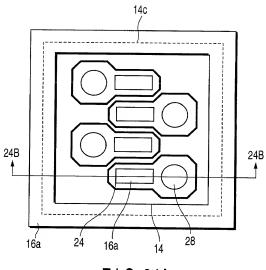


F I G. 24A

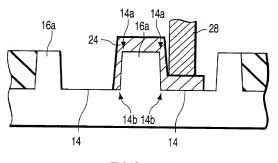



F I G. 24B

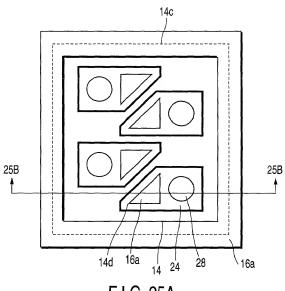



F I G. 25A

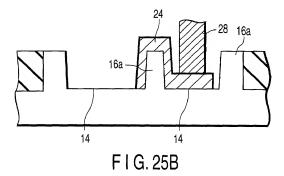


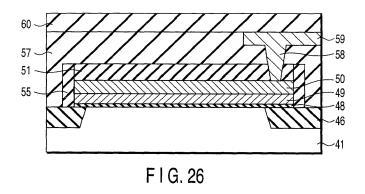


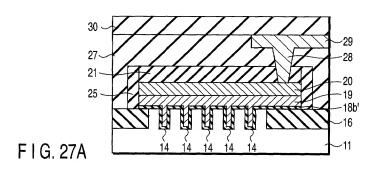


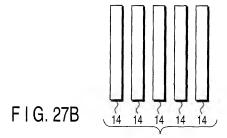



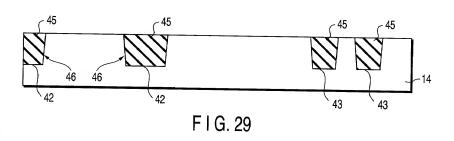

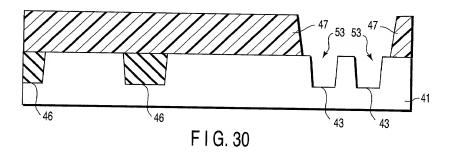

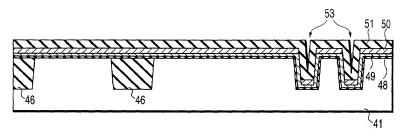

F I G. 31

